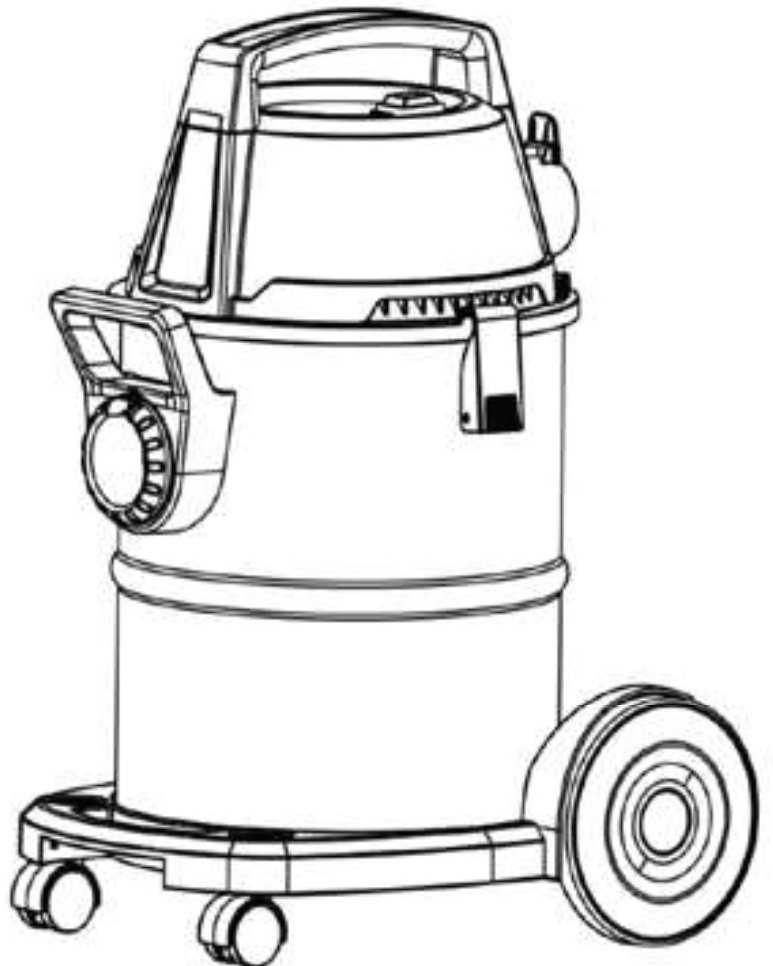


SHARP

เครื่องดูดฝุ่นแบบแห้ง และเปียกอกเนกประสงค์ EC-WE16B-B

บริษัทฯ ขอขอบคุณท่านผู้มีอุปการคุณ
ที่เลือกใช้ผลิตภัณฑ์ของชาร์ป
โปรดอ่านคู่มือการใช้งานนี้โดยละเอียด
เพื่อการใช้งานอย่างเหมาะสม และเก็บ
คู่มือฉบับนี้ไว้อย่างเหมาะสมเพื่อใช้เป็น
ข้อมูลอ้างอิงในอนาคต



สารบัญ

คำแนะนำด้านความปลอดภัยที่สำคัญสำหรับผู้ใช้	3
ส่วนต่างๆ ของเครื่องดูดฝุ่น	5
การประกอบชิ้นส่วนอุปกรณ์	6
ฟังก์ชันการเป่าลม	6
การเก็บสายไฟ	6
การใช้งาน	7
การเทน้ำออกจากถังเก็บน้ำเสีย	7
การทำความสะอาดและการดูแลรักษา	8
การแก้ไขปัญหา	8

คำแนะนำด้านความปลอดภัยที่สำคัญสำหรับผู้ใช้

ขอขอบพระคุณที่ท่านเลือกซื้อและใช้งานเครื่องดูดฝุ่นแบบแห้งและเปียกอกเนกประสงค์จากชาร์ป ก่อนใช้งานเครื่องดูดฝุ่น โปรดอ่านคู่มือการใช้งานเล่มนี้อย่างละเอียด ข้อควรระวังด้านความปลอดภัยที่แสดงไว้ในคู่มือนี้จะช่วยลดความเสี่ยงของการเกิดเพลิงไหม้ ไฟฟ้าช็อต และการบาดเจ็บเมื่อปฏิบัติตามคำแนะนำอย่างถูกต้อง

โปรดเก็บรักษาคู่มือเล่มนี้ไว้ในที่ที่ปลอดภัยเพื่อใช้สำหรับการอ้างอิงในอนาคต และควรเก็บไว้กับใบรับประกันสินค้าที่กรอกข้อมูลครบถ้วน ใบเสร็จรับเงินแสดงการซื้อสินค้า และกล่องบรรจุเครื่องดูดฝุ่น ในกรณีที่มีการส่งต่อเครื่องดูดฝุ่นให้กับผู้ใช้ท่านอื่น อย่าลืมมอบคู่มือการใช้งานเล่มนี้ให้กับผู้ใช้ท่านใหม่ด้วย

เมื่อใช้งานเครื่องดูดฝุ่น โปรดปฏิบัติตามข้อควรระวังด้านความปลอดภัยขั้นพื้นฐาน และมาตรการป้องกันการเกิดอุบัติเหตุอย่างเคร่งครัดเสมอ ซึ่งมีรายละเอียดดังต่อไปนี้:

ข้อควรระวังเกี่ยวกับการใช้กระแสไฟฟ้าและสายไฟ

- ก่อนเปิดใช้งานเครื่องดูดฝุ่น โปรดตรวจสอบให้แน่ใจว่าแรงดันไฟฟ้า และความถี่กระแสไฟฟ้าภายในประเทศของท่าน ตรงตามที่ระบุไว้บนฉลากผลิตภัณฑ์
- เพื่อลดความเสี่ยงการเสียชีวิตจากกระแสไฟฟ้า ห้ามใช้เครื่องดูดฝุ่น หรือจับสายไฟขณะมือเปียก ห้ามนำเครื่องดูดฝุ่น วางลงไปบนน้ำ หรือทำน้ำหกใส่ตัวเครื่อง
- ห้ามเหยี่ยวัดๆ เข้าไปในเครื่องดูดฝุ่น
- หากสายไฟชำรุด จะต้องเปลี่ยนสายไฟเส้นใหม่กับทางบริษัทผู้ผลิต หรือศูนย์บริการ หรือช่างซ่อมที่ได้รับการรับรองคุณภาพเพื่อป้องกันการเกิดอันตราย
- โปรดตรวจสอบเช็คตัวเครื่อง และสายไฟเป็นประจำเพื่อดูว่ามีร่องรอยความเสียหายหรือไม่ ห้ามใช้งานเครื่องดูดฝุ่น เป็นอันขาดหากสายไฟ หรือตัวเครื่องชำรุด หากมีการตกกระแทก ชำรุดเสียหาย ถูกวางทิ้งไว้ในกลางแจ้ง หรือหล่นใส่น้ำ หรือหากตัวเครื่องทำงานผิดปกติ โปรดติดต่อศูนย์บริการที่ได้รับการแต่งตั้งจากชาร์ปหากมีอุปกรณ์ส่วนใดเสียหาย
- ห้ามบิด งอ ทับ หนีบ หรือทำให้สายไฟเสียหาย
- ห้ามลาก หรือเคลื่อนย้ายเครื่องดูดฝุ่นโดยการดึงสายไฟ ห้ามใช้สายไฟในการขยับตัวเครื่อง ปิดประตูทับสายไฟ หรือดึงสายไฟพาดผ่านขอบหรือมุมที่มีความคม
- ห้ามเคลื่อนที่เครื่องดูดฝุ่นทับสายไฟ เก็บสายไฟให้ห่างจากพื้นผิวที่มีความร้อน
- ปิดสวิตช์เครื่องดูดฝุ่นก่อนเสียบหรือถอดปลั๊กออกจากเต้าเสียบปลั๊กไฟเสมอ

คำเตือน

- ต้องปิดสวิตช์ และถอดปลั๊กเครื่องดูดฝุ่นก่อนเชื่อมต่อ หรือถอดท่อของเครื่องดูดฝุ่น และอุปกรณ์ต่างๆ รวมถึง ก่อนเทน้ำทิ้ง หรือทำความสะอาดถุงเก็บฝุ่น
- ห้ามถอดปลั๊กออกจากเต้าเสียบปลั๊กไฟโดยการดึงกระชากสายไฟ ในการถอดปลั๊ก ให้ใช้มือจับที่หัวปลั๊กเท่านั้น จากนั้นจึงค่อยถอดปลั๊กออกจากเต้าเสียบอย่างเบามือ และกดปุ่มเก็บสายไฟเพื่อเก็บสายไฟกลับเข้าเครื่องให้เรียบร้อย

เงื่อนไขและข้อจำกัดการใช้งาน

- เครื่องดูดฝุ่นรุ่นนี้มีวัตถุประสงค์เพื่อการใช้งานภายในบ้านเท่านั้น ไม่เหมาะสำหรับใช้งานในเชิงพาณิชย์/อุตสาหกรรม หรือการใช้งานกลางแจ้ง
- ใช้งานเครื่องดูดฝุ่นรุ่นนี้บนพื้นผิวภายในอาคารเท่านั้นตามคำแนะนำในคู่มือนี้ และควรใช้งานร่วมกับอุปกรณ์เสริมของแท้ที่ทางบริษัทผู้ผลิต/ตัวแทนจำหน่ายจัดมาให้
- ห้ามใช้งานเครื่องดูดฝุ่นเพื่อวัตถุประสงค์อื่นนอกเหนือจากที่อธิบายไว้ในคู่มือนี้
- การติดตั้งและการใช้งานอย่างไม่ถูกวิธี อาจทำให้เกิดเพลิงไหม้ ไฟฟ้าช็อต และ/หรือการบาดเจ็บได้ ทางบริษัทฯ จะไม่รับผิดชอบความเสียหายใดๆ ที่เกิดจากการใช้งานอย่างไม่ถูกวิธี
- อุปกรณ์นี้ไม่มีวัตถุประสงค์สำหรับการใช้งานโดยบุคคล (รวมถึงเด็กๆ) ที่มีความบกพร่องทางด้านร่างกาย ประสาทสัมผัส หรือจิตใจ หรือผู้ที่ขาดประสบการณ์และความรู้ เว้นแต่ว่าจะได้รับการดูแลหรือคำแนะนำเกี่ยวกับการใช้งานอุปกรณ์โดยบุคคลที่มีหน้าที่รับผิดชอบบุคคลดังกล่าวอย่างใกล้ชิด
- ควรดูแลเด็กอย่างใกล้ชิดเพื่อป้องกันไม่ให้เด็กเล่นเครื่องดูดฝุ่น โดยเฉพาะเวลาที่ต้องใช้งานเครื่องดูดฝุ่นใกล้เด็ก
- ห้ามเปิดเครื่องดูดฝุ่นทิ้งไว้โดยไม่มีคนดูแล

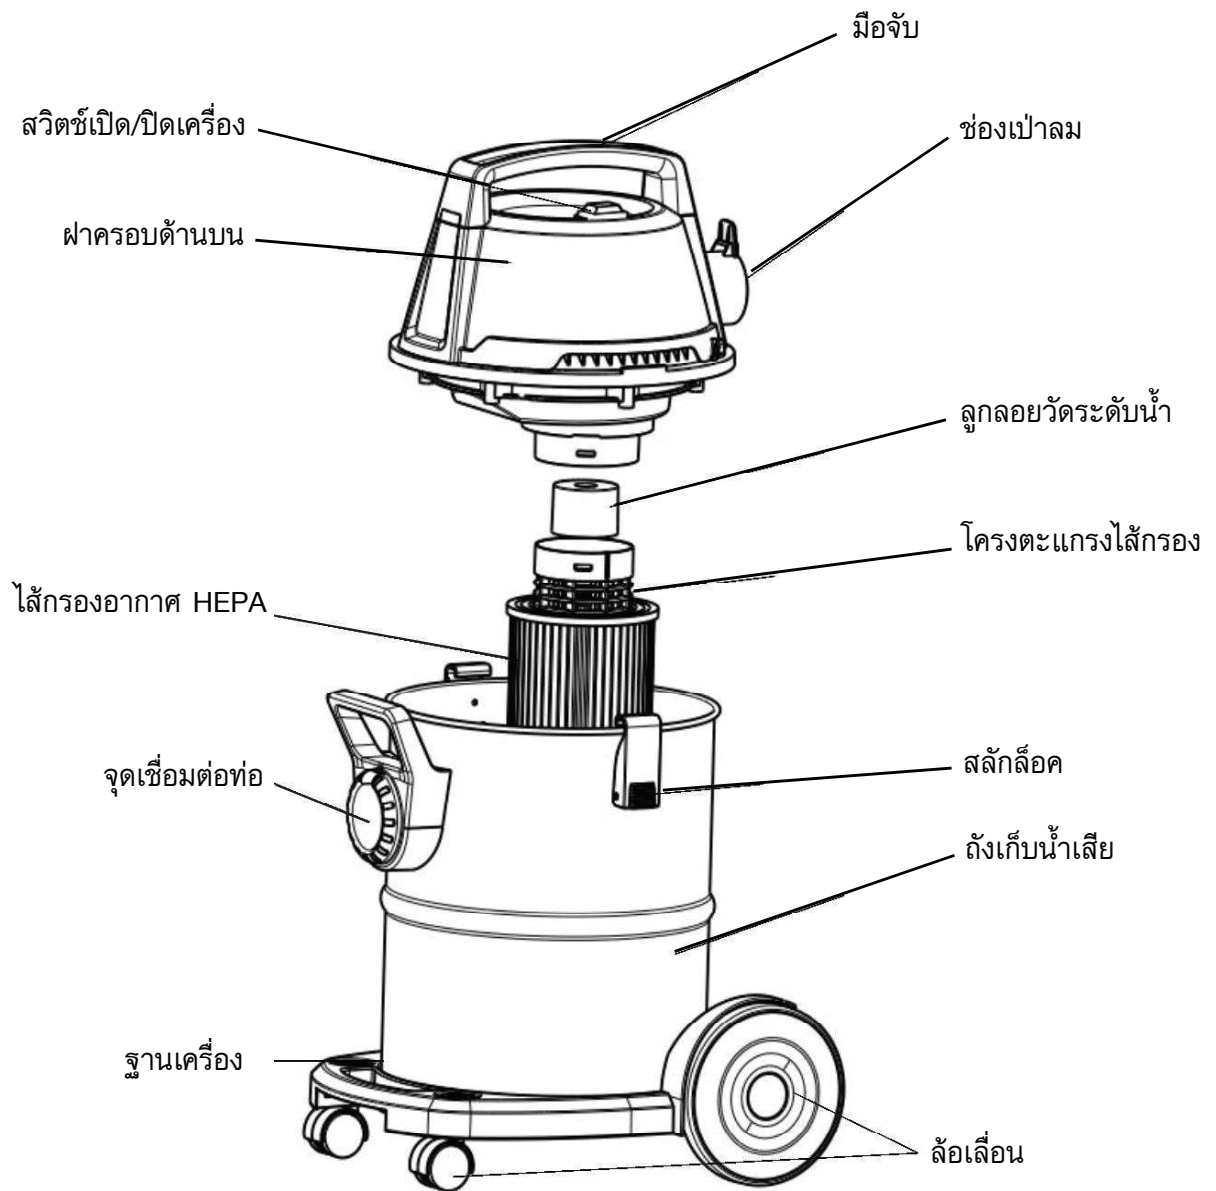
การใช้งานอย่างปลอดภัย

- อย่าให้เส้นผม ขายเส้นผ้า นิ้วมือ และอวัยวะส่วนอื่นของร่างกายอยู่ใกล้กับช่องต่างๆ บนตัวเครื่อง และชิ้นส่วนอุปกรณ์ที่สามารถเคลื่อนที่ได้ของเครื่องดูดฝุ่น
- ใบหน้าและอวัยวะส่วนต่างๆ ของผู้ใช้จะต้องอยู่ห่างจากส่วนปลายของท่ออ่อน ท่อพลาสติก และช่องต่างๆ ของเครื่องดูดฝุ่นเสมอ
- ห้ามชี้เครื่องดูดฝุ่นไปที่ตัวคน หรือสัตว์เลี้ยงขณะใช้งาน
- ห้ามใช้เครื่องดูดฝุ่นโดยไม่ติดตั้งไส้กรองอากาศ
- โปรดใช้ความระมัดระวังเป็นพิเศษในการดูดฝุ่นหรือน้ำบนบันได
- ห้ามใช้เครื่องดูดฝุ่นในการดูดสารหรือวัตถุดังต่อไปนี้: ฝุ่นผงที่เป็นอันตราย วัตถุที่มีความร้อน (เช่น บุหรี่ หรือซีเมนต์ที่ยังติดไฟอยู่ เป็นต้น) ของเหลวที่สามารถติดไฟได้ ระเบิดได้ หรือสารเคมีรุนแรง (เช่น น้ำมันเชื้อเพลิง สารตัวทำละลาย กรดและด่าง เป็นต้น) ฝุ่นผงที่สามารถติดไฟได้ หรือระเบิดได้ (เช่น ฝุ่นแมกนีเซียม หรืออะลูมิเนียม เป็นต้น)
- เก็บรักษาเครื่องดูดฝุ่นให้ห่างจากแหล่งของความร้อน (เช่น อุปกรณ์ที่ทำให้เกิดความร้อน เตารีดไฟฟ้า เป็นต้น) แสงแดด ความชื้น และขอบของวัตถุต่างๆ ที่มีความคม
- หมั่นดูแลรักษาช่องต่างๆ บนเครื่องดูดฝุ่นให้ปราศจากฝุ่นละออง เศษขุยผ้า เส้นผม หรือสิ่งสกปรกทุกชนิด เพื่อให้อากาศไหลเวียนได้อย่างสะดวก
- ห้ามใช้งานเครื่องดูดฝุ่นขณะที่ช่องต่างๆ บนตัวเครื่องอุดตัน หรืออากาศไหลเวียนได้ไม่ดี
- ควรเก็บรักษาเครื่องดูดฝุ่นให้มิดชิดทุกครั้งหลังการใช้งาน เพื่อป้องกันคนเดินสะดุดเครื่อง
- เก็บรักษาเครื่องดูดฝุ่นไว้ในอาคาร ในห้องที่เย็นและแห้งสนิท และเด็กไม่สามารถเข้าถึงได้
- ห้ามพยายามเปิดฐานมอเตอร์ของเครื่องดูดฝุ่น หรือเปลี่ยนสายไฟด้วยตัวเอง




คำเตือน

- ห้ามใช้เครื่องดูดฝุ่นเมื่อพลังในการดูดฝุ่นและน้ำของตัวเครื่องลดลง เมื่อเกิดเหตุการณ์เช่นนี้ ให้ปิดสวิตช์เครื่องดูดฝุ่น แล้วถอดปลั๊กออกจากเต้าเสียบปลั๊กไฟ จากนั้นตรวจเช็คดูว่าถุงเก็บฝุ่นเต็มหรือไม่ และดูว่ามีส่วนใดของหัวแปรงทำความสะอาดพื้น ท่อพลาสติก หรือท่ออ่อนอุดตันหรือไม่
- ห้ามใช้เครื่องดูดฝุ่นจนกว่าจะกำจัดสิ่งอุดตันได้อย่างหมดจด และตัวเครื่องกลับมาทำงานได้ตามปกติอีกครั้ง
- หากท่านไม่สามารถแก้ปัญหาได้ โปรดติดต่อศูนย์บริการที่ได้รับการแต่งตั้งจากชาร์ป
- ปิดสวิตช์เครื่องดูดฝุ่นทุกครั้งหลังการใช้งาน และก่อนเสียบปลั๊กไฟอีกครั้ง ขณะใช้งานเครื่องดูดฝุ่น ต้องแน่ใจว่าได้จับตัวเครื่องไว้อย่างมั่นคง
- ต้องปิดสวิตช์ และถอดปลั๊กออกจากเต้าเสียบปลั๊กไฟทุกครั้งก่อนทำการประกอบชิ้นส่วนอุปกรณ์ เปิดหรือเทถุงเก็บฝุ่น หรือก่อนเชื่อมต่อ/ถอดชิ้นส่วนอุปกรณ์
- หากเครื่องดูดฝุ่นชำรุด จะต้องนำไปซ่อมแซมกับทางบริษัทผู้ผลิต หรือศูนย์บริการ หรือช่างซ่อมที่ได้รับการรับรองคุณภาพ เพื่อป้องกันการเกิดอันตราย ในกรณีที่เกิดความเสียหาย โปรดติดต่อขอคำแนะนำจากศูนย์บริการที่ได้รับการแต่งตั้งจากชาร์ป



ส่วนต่าง ๆ ของเครื่องดูดฝุ่น




รายการอุปกรณ์ที่จัดมาให้พร้อมเครื่อง

- | | | | | | |
|----|---|------------------------|----|--|-----------------------|
| 1. |  | หัวแปรงทำความสะอาดพื้น | 2. |  | หัวแปรงดูดน้ำ |
| 3. |  | ท่อพลาสติก | 4. |  | ท่ออ่อน |
| 5. |  | หัวแปรงดูดฝุ่นแบบกลม | 6. |  | หัวดูดฝุ่นตามซอกเล็กๆ |
| 7. |  | ถังเก็บฝุ่น | | | |

การประกอบชิ้นส่วนอุปกรณ์

	ล้อเลื่อน: เสียบแกนล้ออันใหญ่ และแกนล้ออันเล็กเข้าไปในรูที่อยู่ตรงฐานของตัวเครื่อง
	ล้ออ่อน: เสียบข้อต่อของล้ออ่อนเข้าไปในจุดเชื่อมต่อท่อของตัวเครื่อง
	ท่อพลาสติก: หากต้องการใช้ท่อพลาสติก ให้เสียบท่อพลาสติกเข้าไปที่ส่วนปลายของล้ออ่อน
	หัวแปรงทำความสะอาดพื้น: เลือกหัวแปรงสำหรับการทำความสะอาดพื้นแข็งหรือพรม จากนั้นเสียบหัวแปรงเข้ากับส่วนปลายของท่อพลาสติก
	หัวแปรงดูดน้ำแบบทู-อิน-วัน: หากต้องการใช้งานแบบเปียก ให้ประกอบแผงหน้ากากเข้ากับหัวแปรง หากต้องการใช้งานแบบแห้ง ให้ถอดแผงหน้ากากออกจากหัวแปรง และใช้ขนแปรงทำความสะอาดโดยตรง

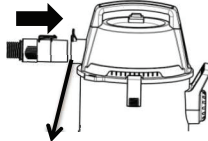ฟังก์ชันการเป่าลม

 ช่องเป่าลม	เสียบข้อต่อของล้ออ่อนเข้าไปในช่องเป่าลมของตัวเครื่อง จากนั้นท่านจะสามารถใช้ฟังก์ชันการเป่าลมในการเป่าไล่ฝุ่นละออง หรือใบไม้
---	--

การเก็บสายไฟ

 ตะขอเก็บสายไฟ	ม้วนสายไฟแล้วนำมาคล้องไว้กับตะขอเก็บสายไฟให้เรียบร้อย
--	--

การใช้งาน

⚠ ต้องติดตั้งไส้กรองอากาศ HEPA ทุกครั้งก่อนใช้งานเครื่องดูดฝุ่น!

การใช้งานเครื่องดูดฝุ่นแบบแห้ง

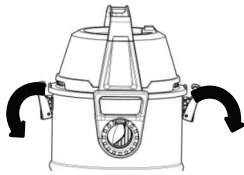
⚠ การใช้งานแบบแห้งจะต้องติดตั้งทั้งไส้กรองอากาศ HEPA และถุงเก็บฝุ่นเสมอ หากพลังในการดูดฝุ่นลดลง ให้เปลี่ยนถุงเก็บฝุ่น สำหรับการดูดซึ้ฝุ่นและผงเขม่าผ่าน ควรใช้ตัวกรองฝุ่นชั้นแรกด้วยเสมอ

การใช้งานเครื่องดูดฝุ่นแบบเปียก


⚠ ข้อควรระวัง: ห้ามติดตั้งถุงเก็บฝุ่นขณะใช้งานแบบเปียก!

ก่อนทำการดูดน้ำ ให้ถอดถุงเก็บฝุ่นออกให้เรียบร้อย ตรวจสอบท่อน้ำว่าระดับน้ำว่าทำงานได้ตามปกติหรือไม่ หากน้ำที่อยู่ในเครื่องมีฟอง หรือมีน้ำซึมออกมานอกตัวเครื่อง ให้ปิดเครื่องทันที และเทน้ำออกจากถังเก็บน้ำเสียให้หมด

การเทน้ำออกจากถังเก็บน้ำเสีย



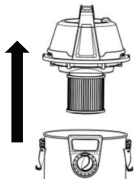ดึงสลักล็อกทั้งสองข้างออกมาด้านนอกเพื่อปลดล็อกถังเก็บน้ำเสีย (หมายเหตุ: อย่าลืมถอดปลั๊กออกจากเต้าเสียบปลั๊กไฟไว้ก่อนล่วงหน้า!)



ถอดฝาครอบด้านล่างบนขึ้นมา จากนั้นถอดถุงเก็บฝุ่น ไส้กรองอากาศ HEPA และนำไปเคาะเบาๆ เพื่อกำจัดฝุ่นออกให้หมด

การทำความสะอาดและการดูแลรักษา



อันตราย

ปิดสวิตช์เครื่อง และถอดปลั๊กออกจากเต้าเสียบปลั๊กไฟให้เรียบร้อยทุกครั้งก่อนที่จะเริ่มทำความสะอาดและดูแลรักษาเครื่องดูดฝุ่น ในส่วนของการซ่อมแซมเครื่อง จะต้องดำเนินการโดยศูนย์บริการที่ได้รับการแต่งตั้งจากชาร์ปเท่านั้น



ข้อควรระวัง

ห้ามใช้น้ำยาทำความสะอาดที่มีฤทธิ์กัดกร่อน น้ำยาเช็ดกระจก หรือน้ำยาทำความสะอาดอเนกประสงค์! ห้ามนำเครื่องดูดฝุ่น ไปแช่ในน้ำ โดยเฉพาะส่วนของมอเตอร์ ฟังก์ชันกรองอากาศให้แห้งสนิทก่อนนำกลับไปใช้งาน

- ทำความสะอาดตัวเครื่อง และชิ้นส่วนอุปกรณ์ต่างๆ ที่เป็นพลาสติกโดยใช้ผ้าชุบน้ำเปล่าบิดพอหมาดๆ
- ห้ามทำความสะอาดชิ้นส่วนอุปกรณ์ต่างๆ โดยใช้เครื่องซักผ้า
- หากจำเป็น ให้ล้างถังเก็บน้ำ และอุปกรณ์ต่างๆ โดยใช้น้ำเปล่า และเช็ดให้แห้งสนิทก่อนนำกลับไปใช้งาน
- ทำความสะอาดไส้กรองอากาศ HEPA โดยใช้น้ำจากก๊อกโดยตรง ห้ามเช็ดถูหรือใช้แปรงขัด จากนั้นผึ่งให้แห้งสนิท ก่อนนำมาประกอบกลับเข้าเครื่อง

การแก้ไขปัญหา

หากหลังในการดูดฝุ่นและน้ำของตัวเครื่องลดลง โปรดตรวจสอบดังต่อไปนี้:

- หากอุปกรณ์เสริมต่างๆ ท่ออ่อน หรือท่อพลาสติกอุดตัน ให้กำจัดสิ่งอุดตันออกให้หมด
- หากถุงเก็บฝุ่นเต็ม ให้ติดตั้งถุงเก็บฝุ่นอันใหม่
- หากไส้กรองอากาศ HEPA อุดตัน ให้นำไปล้างทำความสะอาดโดยใช้น้ำจากก๊อกโดยตรง
- หากไส้กรองอากาศ HEPA ชำรุด ให้เปลี่ยนไส้กรองอากาศอันใหม่

อุปกรณ์นี้ไม่ได้มีวัตถุประสงค์สำหรับการใช้งานโดยบุคคล (รวมถึงเด็กๆ) ที่มีความบกพร่องทางด้านร่างกาย ประสาทสัมผัส หรือจิตใจ หรือผู้ที่ขาดประสบการณ์และความรู้เกี่ยวกับการใช้งาน เว้นแต่จะมีการดูแลหรือให้คำแนะนำเกี่ยวกับการใช้งาน อย่างใกล้ชิดโดยบุคคลที่มีหน้าที่รับผิดชอบเพื่อความปลอดภัย ควรดูแลเด็กอย่างใกล้ชิดเพื่อป้องกันเด็กเล่นอุปกรณ์นี้

หากสายไฟชำรุด จะต้องเปลี่ยนสายไฟเส้นใหม่กับทางบริษัทผู้ผลิต ศูนย์บริการ หรือช่างซ่อมที่ได้รับการรับรองคุณภาพ เพื่อป้องกันการเกิดอันตราย

อุปกรณ์นี้มีวัตถุประสงค์สำหรับการใช้งานในครัวเรือน และในสถานที่ที่คล้ายกัน เช่น

- พื้นที่ประกอบอาหารสำหรับพนักงาน เช่น ภายในร้านค้า สำนักงาน และสถานที่ทำงานอื่นๆ
- บ้านสวน
- การใช้งานโดยลูกค้าในโรงแรม และที่พักอาศัยอื่นๆ
- ที่พักที่มีการเตรียมอาหารเข้าให้

SHARP

INSTRUCTION MANUAL

Wet & Dry Vacuum Cleaner EC-WE16B-B

**PLEASE READ THE
MANUAL CAREFULLY
BEFORE USING AND
KEEP IT PROPERLY
FOR FUTURE USE**

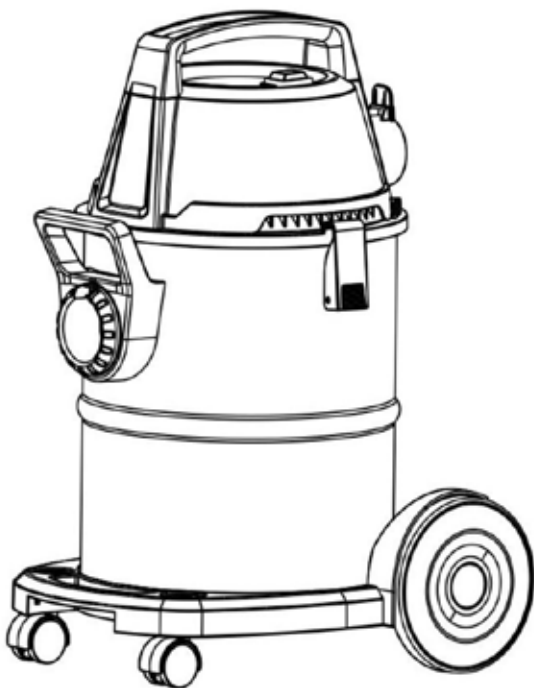
You can obtain an electronic instruction manual for your reference or If you have lost the original manual, please contact the local agent or send an email to contact@smef.sharp-world.com or contact us

Phone: +971 4 8129 311 &

Fax: +971 4 8816 692

Warning notices: Before using this product, please read this manual carefully and keep it for future reference.

The design and specifications are subject to change without prior notice for product improvement. Consult with your dealer or manufacturer for details.



Contents

IMPORTANT SAFETY INSTRUCTIONS FOR THE USER	3
SPECIFICATION	5
ASSEMBLY	6
BLOWER FUNCTION	6
POWER CORD STORAGE	6
OPERATION.....	7
EMPTY THE DIRT TANK	7
MAINTENANCE AND CARE.....	8
TROUBLE SHOOTING	8

IMPORTANT SAFETY INSTRUCTIONS FOR THE USER

Thank you for purchasing and using our wet and dry vacuum cleaner, before using the vacuum cleaner, please read this manual carefully. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to.

Keep the manual in a safe place for future reference, along with the completed warranty card, purchase receipt and carton. If applicable, pass these instructions on to the next owner of the appliance.

Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:

Electrical safety and cord handling

- Before turning on, ensure that your electrical voltage and circuit frequency correspond to those indicated on the appliance.
- To reduce the risk of electrocution, never operate this product or handle the plug with wet hands, submerge it under water or spill liquids into the product.
- Do not insert any objects into the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or an appropriately qualified person in order to avoid a hazard.
- Check the appliance and cord regularly for visible damage. Do not use it if the cord or housing is damaged, if it has been dropped, damaged, left outdoors or dropped into water, or if any faulty appears. Call the after sales support line if any part appears damaged.
- Do not kink, bend, squash, strain or damage the power cord.
- Do not pull or carry the vacuum cleaner by the cord. Do not use the cord as a handle, close a door on the cord or pull the cord around sharp edges or corners.
- Do not run the vacuum cleaner over the cord. Keep the cord away from heated surfaces.
- Turn off the vacuum cleaner controls before connecting or disconnecting it from the mains supply.



WARNING

- Always switch off and unplug the vacuum cleaner before connecting or disconnecting the vacuum hose and accessories and before emptying or cleaning the dust tank.
- Do not pull on the cord to disconnect the plug from the power supply. To unplug, grasp the plug, not the cord, and gently pull it out of the power point and then press the cord retraction button to retract the cord.

Usage conditions and restrictions

- This appliance is intended for household use only. It is neither suitable for commercial/industrial nor for outdoor use.
- Only use the vacuum cleaner on indoor surfaces, as described in this manual and with the original accessories supplied by the manufacturer/distributor.
- Do not use it for any purpose other than described in this manual.
- Improper installation and use may result in the risk of fire, electric shock and/ or injury to persons. We assume no liability for any eventual damages caused by improper or faulty use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
- Supervise young children to ensure they do not play with the appliance. Close supervision is necessary when any appliance is used by or near children.
- Never leave the appliance unattended.

Safe usage

- Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts.
- Keep the end of the hose, wands and other openings away from your face and body.

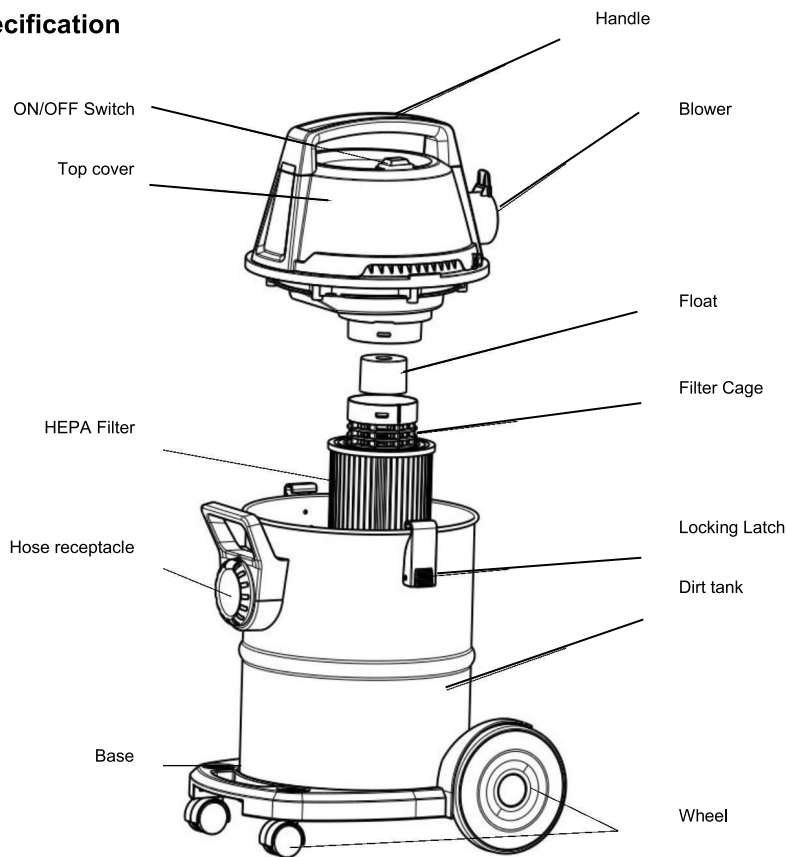
- Do not point the vacuum cleaner at people or animals when in use.
- Do not use the product without the filters in place.
- Take extra care when vacuuming on stairs.
- Do not use the vacuum cleaner to pick up: hazardous dust, hot materials(burning cigarettes hot ashes,etc.),flammable,explosive,aggressive,liquids(e.g.petrol,solvents,acidsalkalis,etc.),flammable, explosive dust (e.g. Magnesium or aluminum dust etc.)
- Keep the vacuum cleaner away from heat sources (radiator, oven etc.), direct sunlight, moisture and sharp edges.
- Keep all openings free of dust, lint, hair or anything that may reduce the airflow.
- Do not use the product with any openings blocked or restricted airflow.
- Put the vacuum cleaner away after every use to prevent anyone tripping over it.
- Store the vacuum cleaner indoors in a cool, dry area, out of reach of young children.
- Never attempt to open the motor base of the vacuum cleaner yourself or to replace the power cord.




WARNING




- Never use this machine when the suction power becomes very weak.
When this happens:
Switch off the unit, unplug it and check whether the dust container is full.
Then check if any part of the floor brush, tube or hose is blocked.
- Do not use the vacuum cleaner until the blockage is removed and it operates normally again.
- If you cannot solve the problem, contact the after sales support line.
- Always switch the vacuum cleaner off after use, and before plugging it in again, make sure to hold the vacuum cleaner firmly when using it.
- Always switch off and unplug the vacuum cleaner from the electrical outlet before assembling, opening or emptying the dust bag, or before connecting/ disconnecting the attachments.
- If the vacuum cleaner is damaged, it must be repaired by the manufacturer or its service agent or a qualified person in order to avoid a hazard. In case of damage, call the after sales support line for advice.
- Do not point the vacuum cleaner at people or animals when in use.
- Do not use the product without the filters in place.
- Take extra care when vacuuming on stairs.
- Do not use the vacuum cleaner to pick up: hazardous dust, hot materials(burning cigarettes hot ashes,etc.),flammable,explosive,aggressive,liquids(e.g.petrol,solvents,acidsalkalis,etc.),flammable, explosive dust (e.g. Magnesium or aluminum dust etc.)
- Keep the vacuum cleaner away from heat sources (radiator, oven etc.), direct sunlight, moisture and sharp edges.
- Keep all openings free of dust, lint, hair or anything that may reduce the airflow.
- Do not use the product with any openings blocked or restricted airflow.
- Put the vacuum cleaner away after every use to prevent anyone tripping over it.
- Store the vacuum cleaner indoors in a cool, dry area, out of reach of young children.
- Never attempt to open the motor base of the vacuum cleaner yourself or to replace the power cord.

Specification



Accessories List:

- | | | | | | |
|----|---|--------------|----|---|--------------|
| 1. |  | Floor Brush | 2. |  | Water Brush |
| 3. |  | Plastic tube | 4. |  | Hose |
| 5. |  | Round Brush | 6. |  | Crevice tool |
| 7. |  | Dust Bag | . | | |

ASSEMBLY:	
	Wheels: Insert the big wheel and the small wheel into the hole of the base.
	Hose: Insert the hose connection wand into the hose inlet.
	Plastic tube: To use the plastic tube, insert the tube into the end of the hose
	Floor Brush: Choose the brush pedal to floor or carpet ,then insert to the suction hole of the plastic tube
	2 in 1 water brush When wet use, please assemble the bottom plate; When dry use, please dissemble the plate and use the bristle to clean directly.
BLOWER FUNCTION:	
 Blower outlet	Insert the hose connector to the blower outlet, then you can use the blower function, blower the dust or leaves.
POWER CORD STORAGE:	
 Cord storage hook	Wind the power cord and place it on the cord storage hook.

OPERATION:



Always work with HEPA filter during wet as well as dry vacuum cleaning!

Dry vacuum cleaning



Work only with a dry HEPA filter and filter bag.

If the suction power is weak, should change the filter bag

If vacuum ashes and soot, should use a pre-separator

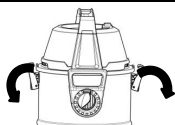
Wet vacuum cleaning




Caution: Do not use the filter bag!

Before liquids are picked up, always remove the filter bag, check the float work properly. If foam develops or liquid emerges from the machine, stop work immediately and empty the dirt tank.

EMPTY THE DIRT TANK:



Pull outward to release the locking latch on both side of the dirt tank (Note: Be sure to cut off the power plug beforehand!)



Take off the top cover, remove the filter bag, HEPA filter and pat the dust off them.

MAINTENANCE AND CARE



Dangerous

Turn off the appliance and remove the mains plug prior to any care and maintenance work. Repair works may only be performed by the authorized customer service.



Caution

Do not use abrasives, glass or universal cleaners! Never immerse the appliance in water, especially the motor

Dry filters completely in the air.

- Clean the appliance and accessory parts made of plastic with clean water and squeeze the water out,
- don't clean them with washing machine,
- If required, rinse the container and accessories with water properly and dry them before reuse,
- Only clean the HEPA filter under running water; do not wipe or brush. Let it dry completely before installation.

TROUBLE SHOOTING

If the cleaning power of the appliance deteriorates please check the following

- Accessories, suction hose or suction tubes are clogged, please remove the obstruction,
- Filter bag is full, install new filter bag,
- HEPA filter is blocked, clean under running water if necessary,
- Replace damaged HEPA filter.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential environments;
- bed and breakfast type environments.